

The Hook




A x2 Square-head screws




B x2 Threaded sleeves



C x2 End caps

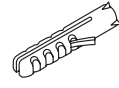

D x2 Wall plugs

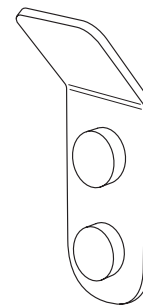

x1

INSTALLATION STEPS

1. Choose the location of The Hook on the wall.

⚠ Make sure you have a solid fixing point at each screw connection. If you have no solid fixing where the screw connects to the wall or door, you will need a suitable wall anchor.

2. Hold The Hook up to the desired position, and place a spirit level on top.

3. Using a pen/pencil mark on the wall through the centre of the two pre-drilled holes.

4. Take The Hook off the wall.

5. Using a 3mm drill bit, drill into the marks you've made on the wall. If drilling through tiles, a 4.5mm bit will be required to pre-drill the depth of the tile.


⚠ ****USING WALL PLUGS?** Drill into your 3mm holes with a 6mm drill bit, fit the wall plugs **D** inside and proceed.

⚠ ****FIXING TO WET AREA?** Fill pre-drilled holes with silicone/sealant before fixing the shelf to the wall.

6. Hold The Hook up to the wall so the holes line up.


7. Put the screw **A** through the threaded sleeve **B** and with a square-head screw driver, screw **A** into the wall, fixing The Hook. Repeat this process with the remaining hole.

8. Finally hand screw on the end caps **C** onto the threaded sleeves **B**.

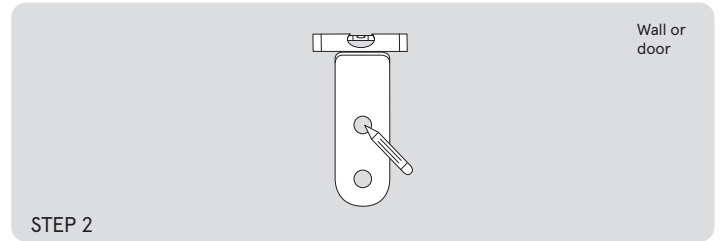


STEP 2


Front view

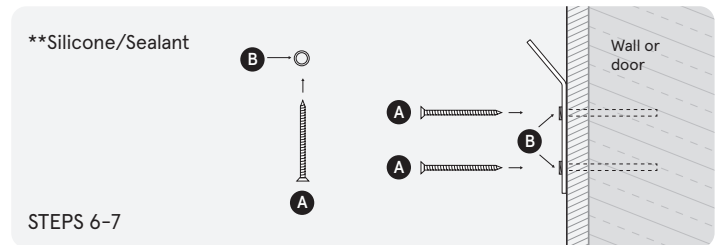

STEPS 6-7

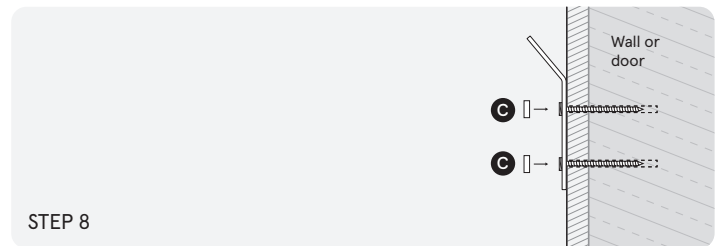

STEP 8

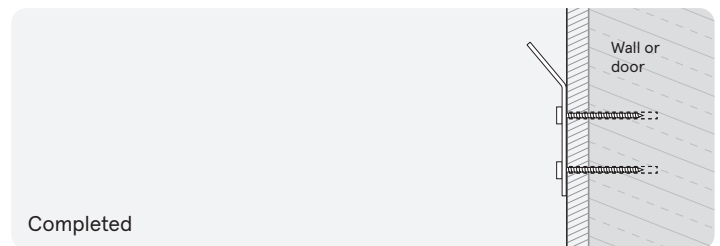

Completed



Level



Pencil / Pen



4.5mm




3mm



6mm*



Electric drill



Square head screw driver



Silicone/Sealant**

For best installation results, we recommend using a qualified builder or professional installer.

*Optional depending on fixing point.